

# Front Door Audio/Video Intercom System

## Guest Entry Procedure

\*\* Repeat steps 1-5 for each locked door/gate with an intercom \*\*

1. Guest: Dials 1 [APARTMENT NUMBER] on the intercom pad
2. Resident: 'Press Answer Key' (bottom right button)
3. Guest/Resident: Talk
4. Resident: Press "Door Lock Key" (bottom left button)
5. Guest: Enters door.
6. Resident: Press "Lift Release Button" (top right button)
7. Guest: Call lift and proceed to the apartment level

# ILK APARTMENTS


## Operating Instructions for the Bticino Audio/Video Intercom System



Entrance Panel

### Placing Intercom Call From An Entry

To call an apartment from an entry panel dial the building number followed by the apartment number then press "OK"

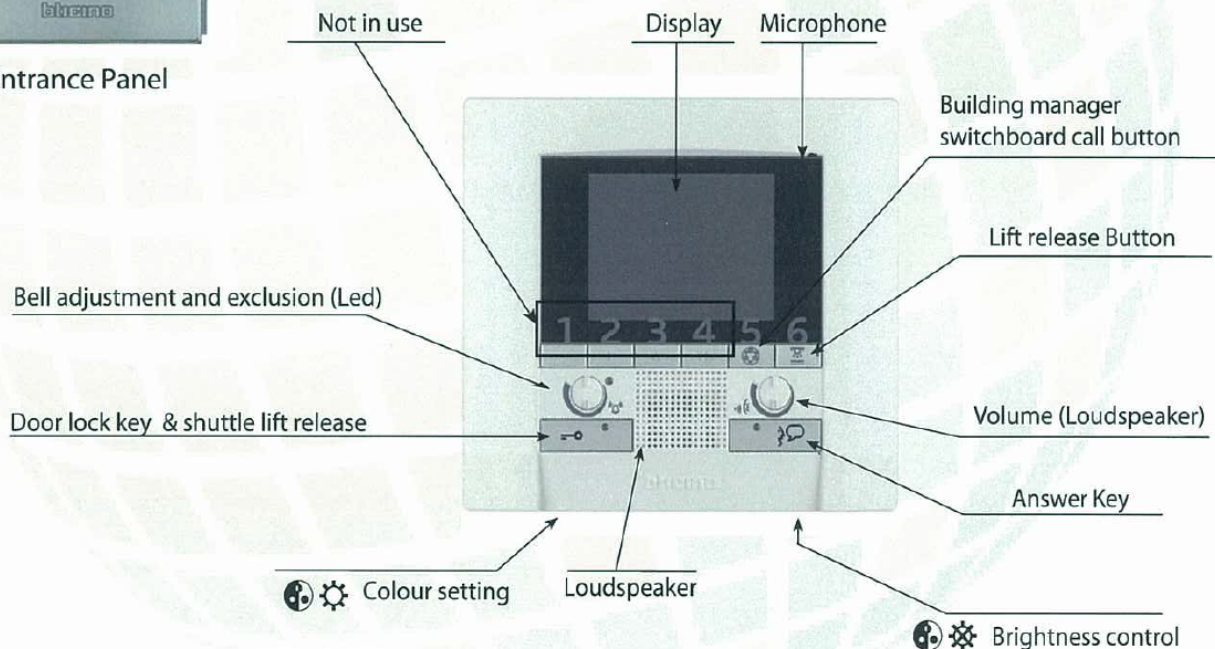

### Apartment Intercom Receiver

Your visitors can call your apartment from an entrance panel. When called, the system will emit an electronic tone at your apartment intercom. To answer press "Answer key" momentarily.

To grant your visitor/s access into the building, press the "Door lock key". This function will unlock the entry door for approx 5 seconds. To grant your visitors access to your personal apartment lobby level via the high rise lift car press the "Lift release Button" (6). This function will de-secure the lift car floor selection button relevant to your floor for approx 180 seconds. In order to place a call directly to the Building Manager, press the "switchboard call button" (5) momentarily.